



PROJECT INSTRUCTIONS

BASE COURSE


- Excavate an area 48 inches by 28 inches to a minimum depth of 8 inches.
- Install base gravel to a compacted depth of 6 inches. Compact the gravel in 2- to 3-inch lifts to insure proper compaction.
- Level the first end unit front to back and side to side keeping the unit six inches from each side of your excavated area. Make sure the textured sides are facing out.

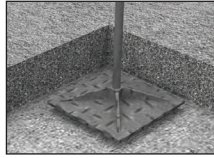

- Repeat this step for the other bench support. Make sure to level between the bench supports.

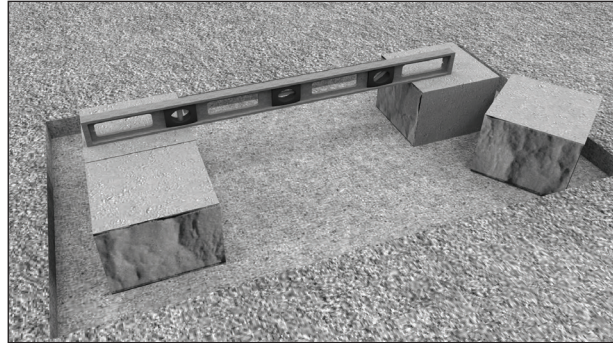


- Place glue on top of the second course.

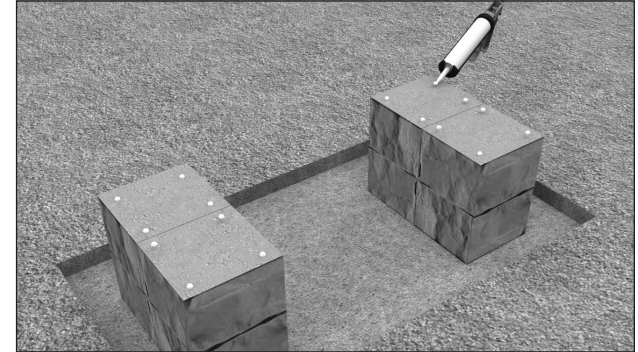

SUBSEQUENT COURSES

- Course two starts with a few dots of glue 3- to 6-inches apart on each unit.

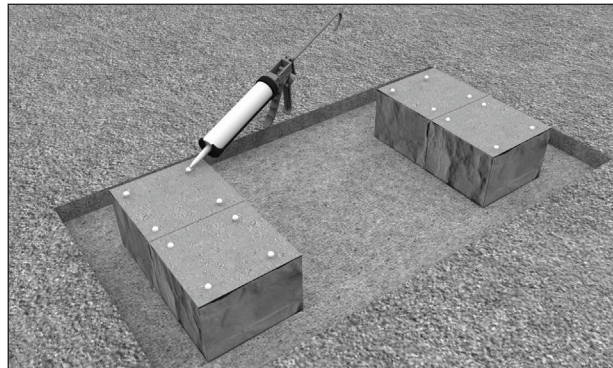

BENCH

- Place the Landings™ step unit onto the two supports and center.



- Set the four units of the second course on top of the first course making sure to line up the corners for a clean edge.