

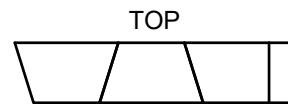



CAP UNIT

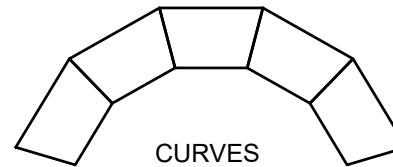

SAW CUT AS
REQUIRED TO
CONSTRUCT
MITERED
CORNER

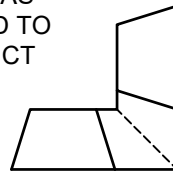

CURVES

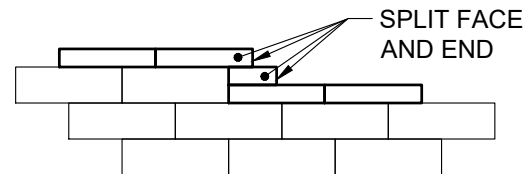

WALL FACE

1. ALWAYS START CAPPING WALL FROM THE LOWEST ELEVATION.
2. LAYOUT CAPS PRIOR TO USING ADHESIVE.
3. CUT CAPS TO FIT. VARIOUS COMBINATIONS OF LONG AND SHORT CAP FACES WILL BE NECESSARY FOR RADII GREATER THAN THE MINIMUM.
4. ALTERNATE SHORT AND LONG CAP FACES EVERY OTHER CAP TO ACHIEVE A STRAIGHT ROW OF CAPS.
5. USE EXTERIOR-GRADE CONSTRUCTION ADHESIVE TO SECURE CAPS.



This drawing is for illustrative purposes only and should not be used for construction without the signature of a registered professional engineer.

www.anchordiamond.com

© 2025 ANCHOR Engineering, LLC®
and © 2025 ANCHOR DIAMOND Group. All rights reserved

Diamond® 9D Retaining Wall System

TYPICAL CAPPING DETAILS

Scale:	NONE	Drawn by:	MAH
Date:	10/29/2025	Drawing number:	D9D-01