


MULTI-PIECE SYSTEM

PROJECT INSTRUCTIONS

BASE COURSE

- Excavate an area 48 inches by 24 inches to a minimum depth of 8 inches.
- Install base gravel to a compacted depth of 6 inches. Compact the gravel in 2 to 3 inch lifts to ensure proper compaction.
- Split six inches off of the manufactured end of each of the four column units as shown.

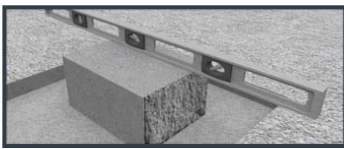

- Level the first end unit front to back and side to side keeping the unit six inches from each side of your

excavated area. Make sure the textured sides are facing out.




- Repeat this step for the other bench support. Make sure to level between the bench supports.

SUBSEQUENT COURSES

- Course two starts with a few dots of glue 3 to 6 inches apart on each unit.
- Set the two units of the second course on top of the first course making sure to line up the corners for a clean edge,

BENCH

- Place glue on top of the second course.
- Place the step unit onto the two supports and center.
- Finish the grade around the supports as needed.

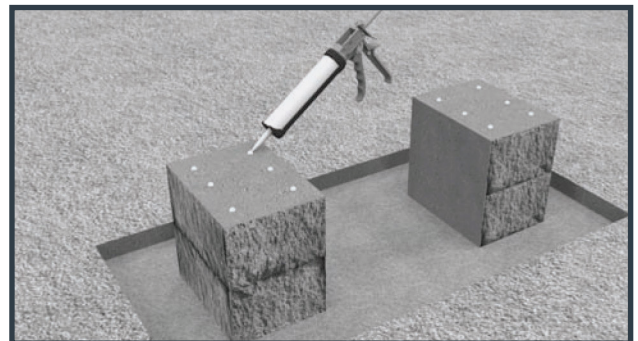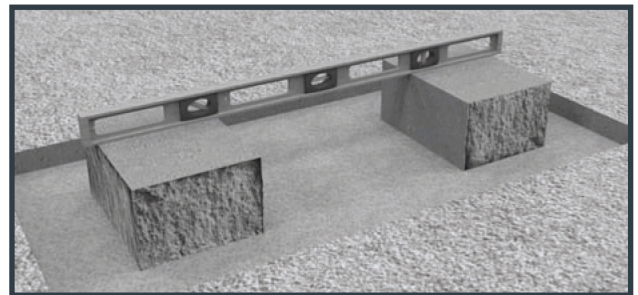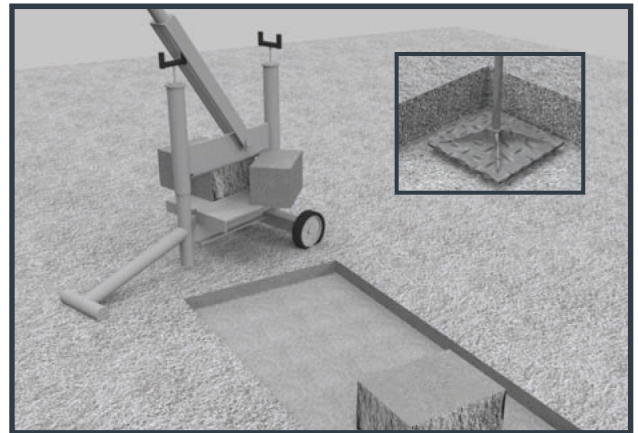

ANCHOR DIAMOND Group
5909 Baker Rd. Suite 550
Minnetonka, MN 55345

©2023 ANCHOR DIAMOND Group. All rights reserved.
AD23-005 01/23